



Suez Canal Cross Sections
Phase 66' east / 42' west

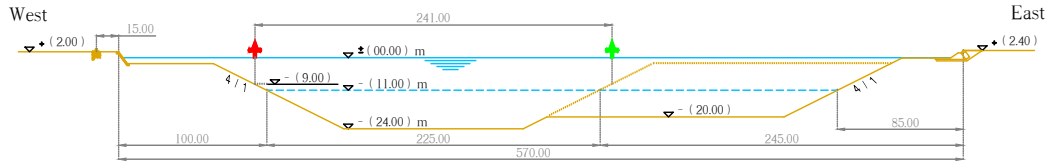


Cross Section at Km 6.737 - 8.400 E
 H-Scale = 0.5 V-Scale

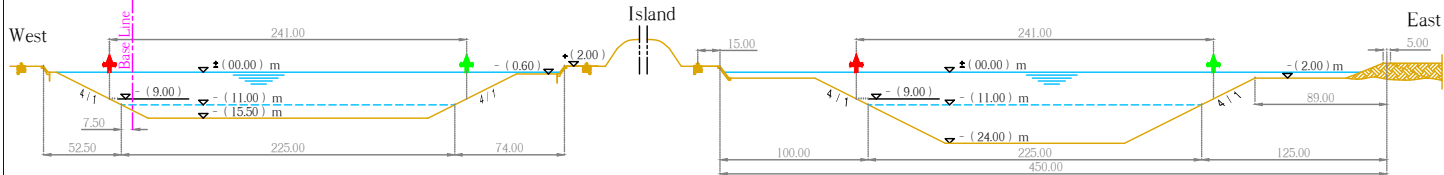

Cross Section at Km 6.000 - 16.450




Cross Section at Km 8.650 - 15.190 E

H-Scale = 0.5 V-Scale

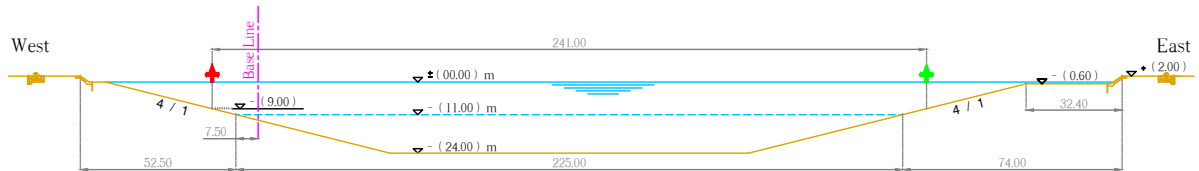


Cross Section at Km 19.000 - 30.190

Suez Canal Cross Sections
Phase 66'

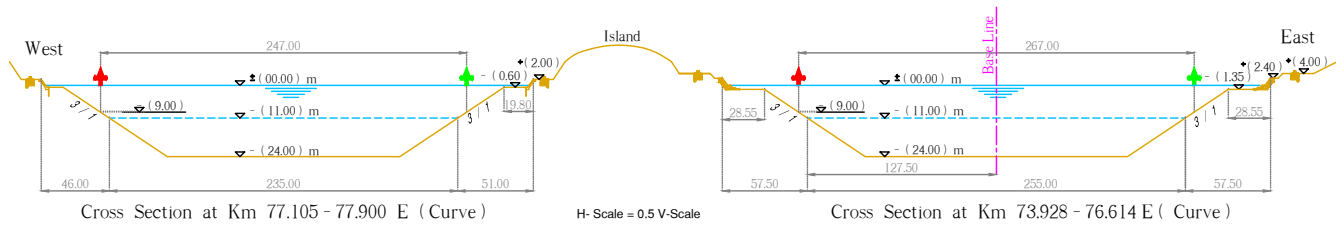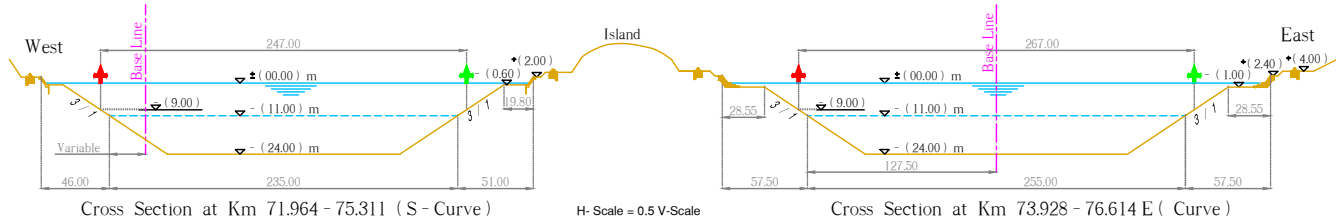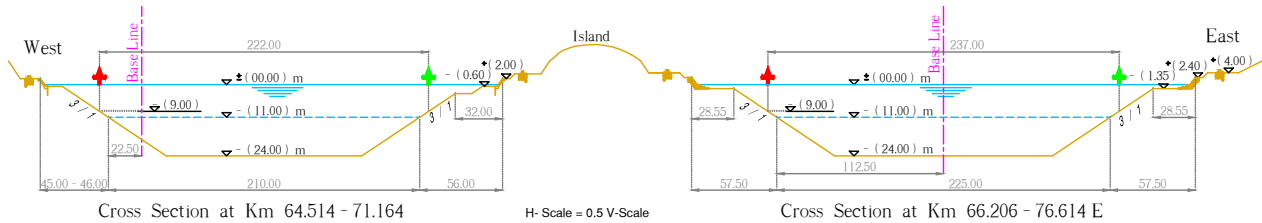


Suez Canal Cross Sections
Phase 66'

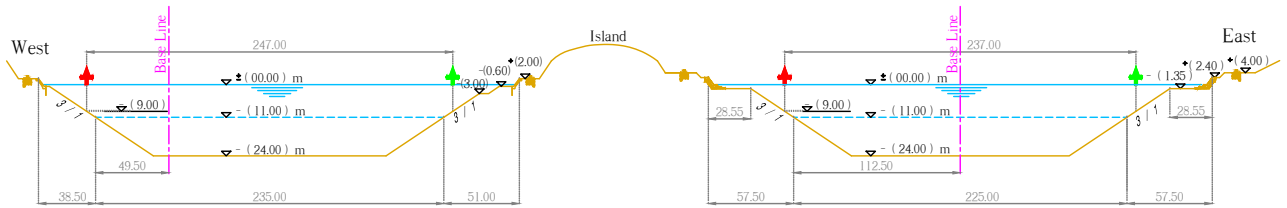

Cross Section at Km 82.576 - 85.027

H- Scale = 0.5 V-Scale


Cross Section at Km 77.813 - 88.874 E

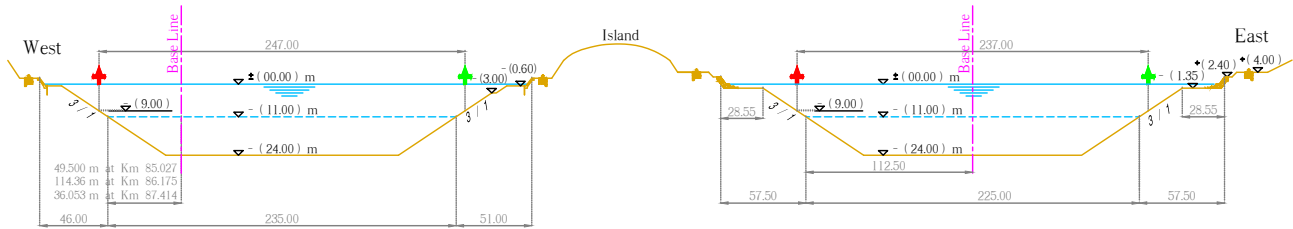

Cross Section at Km 85.027 - 87.414 (Curve)

H- Scale = 0.5 V-Scale

Cross Section at Km 77.813 - 88.874 E

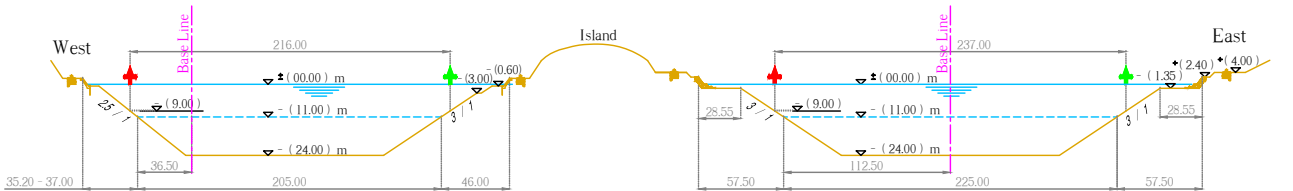




Cross Section at Km 88.814 - 92.808

H- Scale = 0.5 V-Scale


Cross Section at Km 77.813 - 88.874 E

Cross Section at Km 77.813 - 88.874 E


Suez Canal Cross Sections Phase 66'

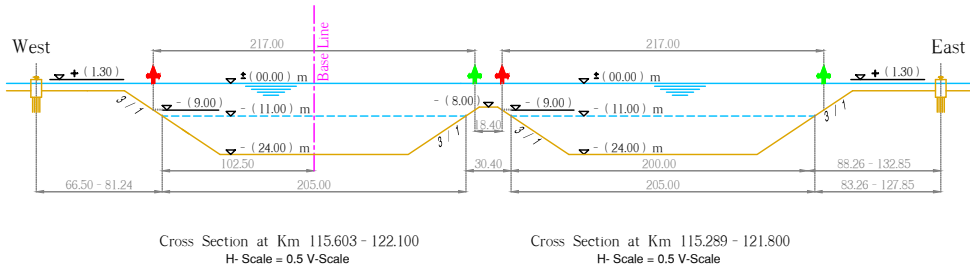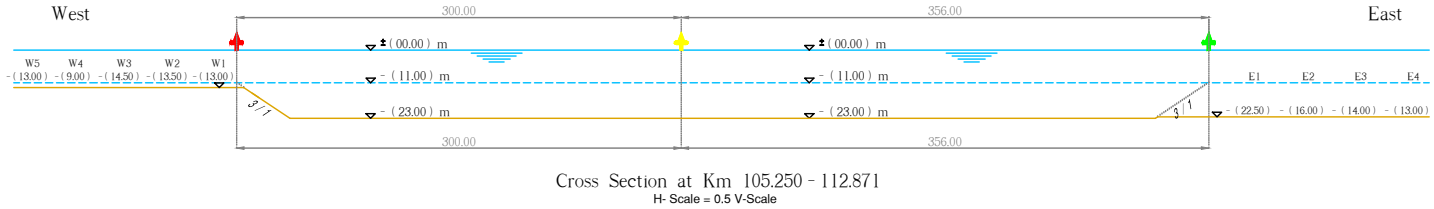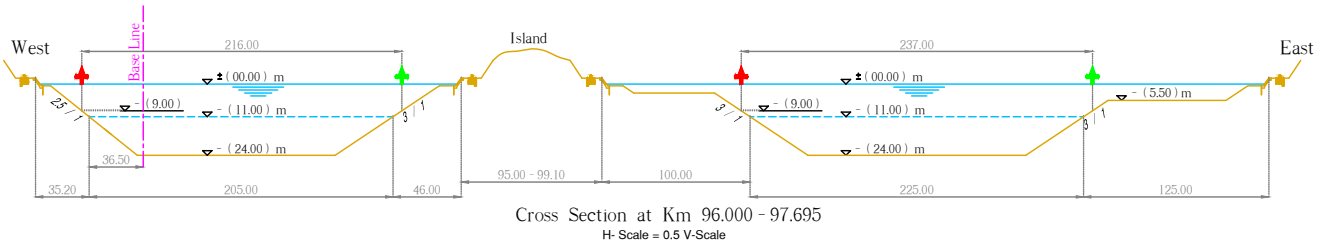


Suez Canal Cross Sections Phase 66'

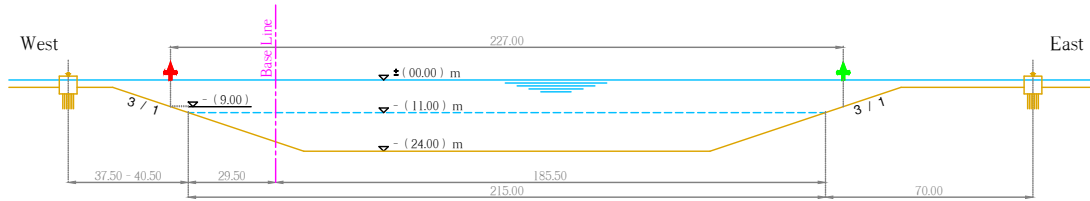

Cross Section at Km 126.107 - 128.899

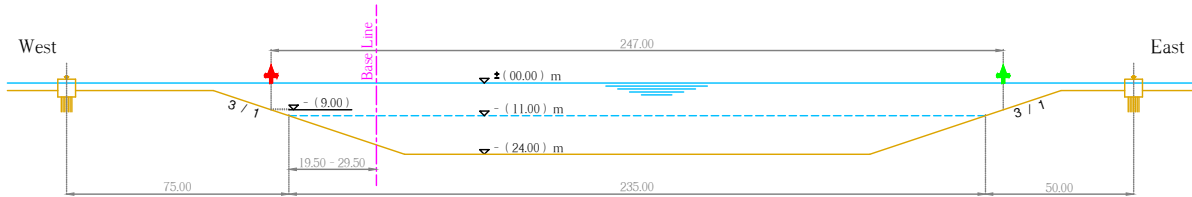


Cross Section at Km 129.499 - 131.975 (Curve)

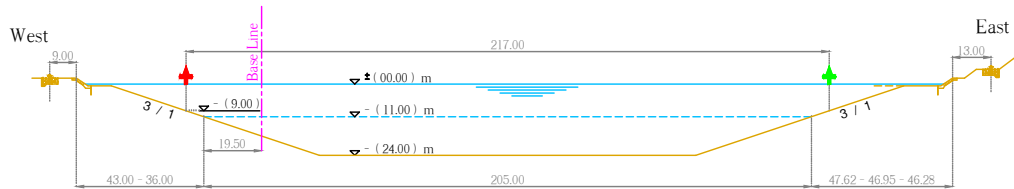


Cross Section at Km 134.543 - 141.875
 Cross Section at Km 143.125 - 144.714


Suez Canal Cross Sections
Phase 66'

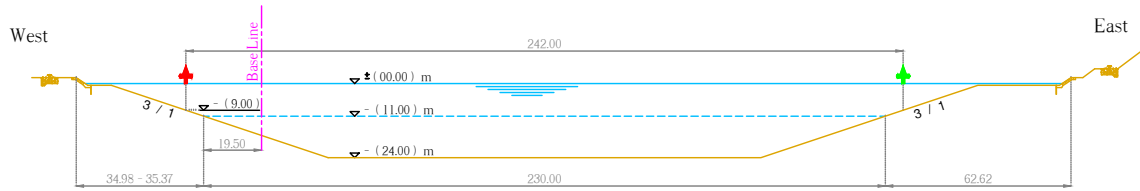

Cross Section at Km 142.000 - 143.000 (at Tunnel)

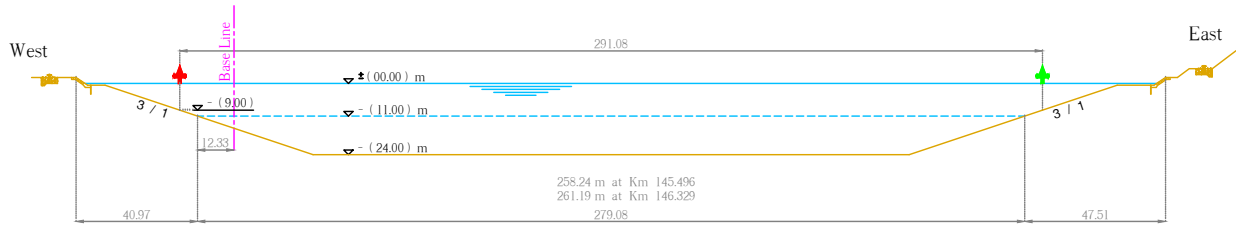


Cross Section at Km 145.915 (Siding)

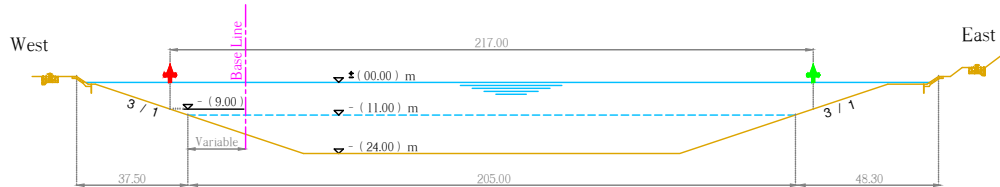


Cross Section at Km 147.146 - 149.400


Suez Canal Cross Sections Phase 66'

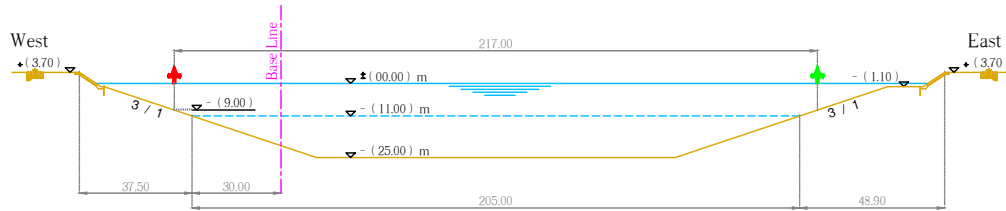

Cross Section at Km 149.400 - 153.524

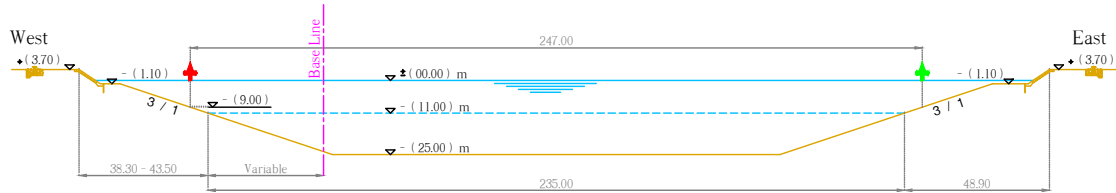

Cross Section at Km 154.724 - 157.550 (Curve)

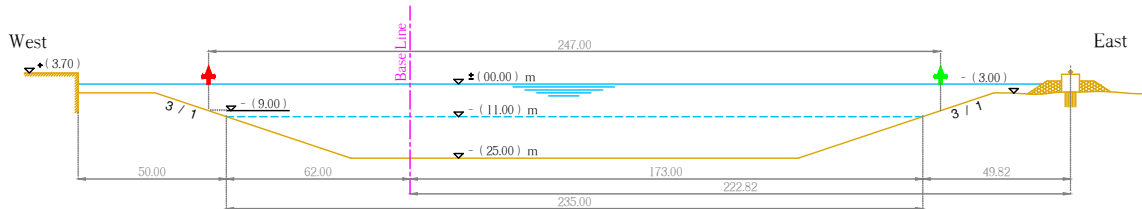

Cross Section at Km 159.900 (Curve)